



GENSET  
PART



# DSE4610/20

## AUTO START AND AUTO MAINS FAILURE CONTROL MODULES

(ALTERNATOR FREQUENCY & MAGNETIC PICK-UP SPEED SENSING)

### FEATURES



The DSE4610 Auto Start Control Module and the DSE4620 Auto Mains (Utility) Failure Control Module are suitable for a wide variety of single gen-set applications.

Whilst maintaining functions included within higher end controllers, such as generator or load power monitoring, the DSE46xx range of especially compact controllers provide the user with the ultimate size to feature ratio.

Monitoring engine speed, oil pressure, coolant temperature, frequency, voltage, current, power and fuel level, the modules will give comprehensive engine and alternator protection. This will be indicated on the largest back-lit LCD icon display in its class via an array of warning, electrical trip and shutdown alarms.

Alternator frequency & magnetic pick up speed sensing support for diesel, gas and petrol engines all in one variant. With a number of flexible inputs, outputs and protections, the modules can be easily adapted to suit a wide range of applications including lighting towers with the added option for staged loading outputs.

Through USB Communication both modules can be easily configured using the DSE Configuration Suite PC Software or can be fully configured through the module's front panel editor.

All DSE products are supported by the DSE global technical support team which gives our customers and end users access to 24 hour system help and advice.

### ENVIRONMENTAL TESTING STANDARDS

#### ELECTRO-MAGNETIC COMPATIBILITY

BS EN 61000-6-2  
EMC Generic Immunity Standard for the Industrial Environment  
BS EN 61000-6-4  
EMC Generic Emission Standard for the Industrial Environment

#### ELECTRICAL SAFETY

BS EN 60950  
Safety of Information Technology Equipment, including Electrical Business Equipment

#### TEMPERATURE

BS EN 60068-2-1  
Ab/Ae Cold Test -30 °C  
BS EN 60068-2-2  
Bb/Be Dry Heat +70 °C

#### VIBRATION

BS EN 60068-2-6  
Ten sweeps in each of three major axes  
5 Hz to 8 Hz at +/-7.5 mm,  
8 Hz to 500 Hz at 2 gn

#### HUMIDITY

BS EN 60068-2-30  
Db Damp Heat Cyclic 20/55 °C at 95% RH 48 Hours  
BS EN 60068-2-78  
Cab Damp Heat Static 40 °C at 93% RH 48 Hours


#### SHOCK

BS EN 60068-2-27  
Three shocks in each of three major axes  
15 gn in 11 ms

#### DEGREES OF PROTECTION PROVIDED BY ENCLOSURES

BS EN 60529  
IP65 - Front of module when installed into the control panel with the optional sealing gasket.

### COMPREHENSIVE FEATURE LIST TO SUIT A WIDE VARIETY OF GEN-SET APPLICATIONS

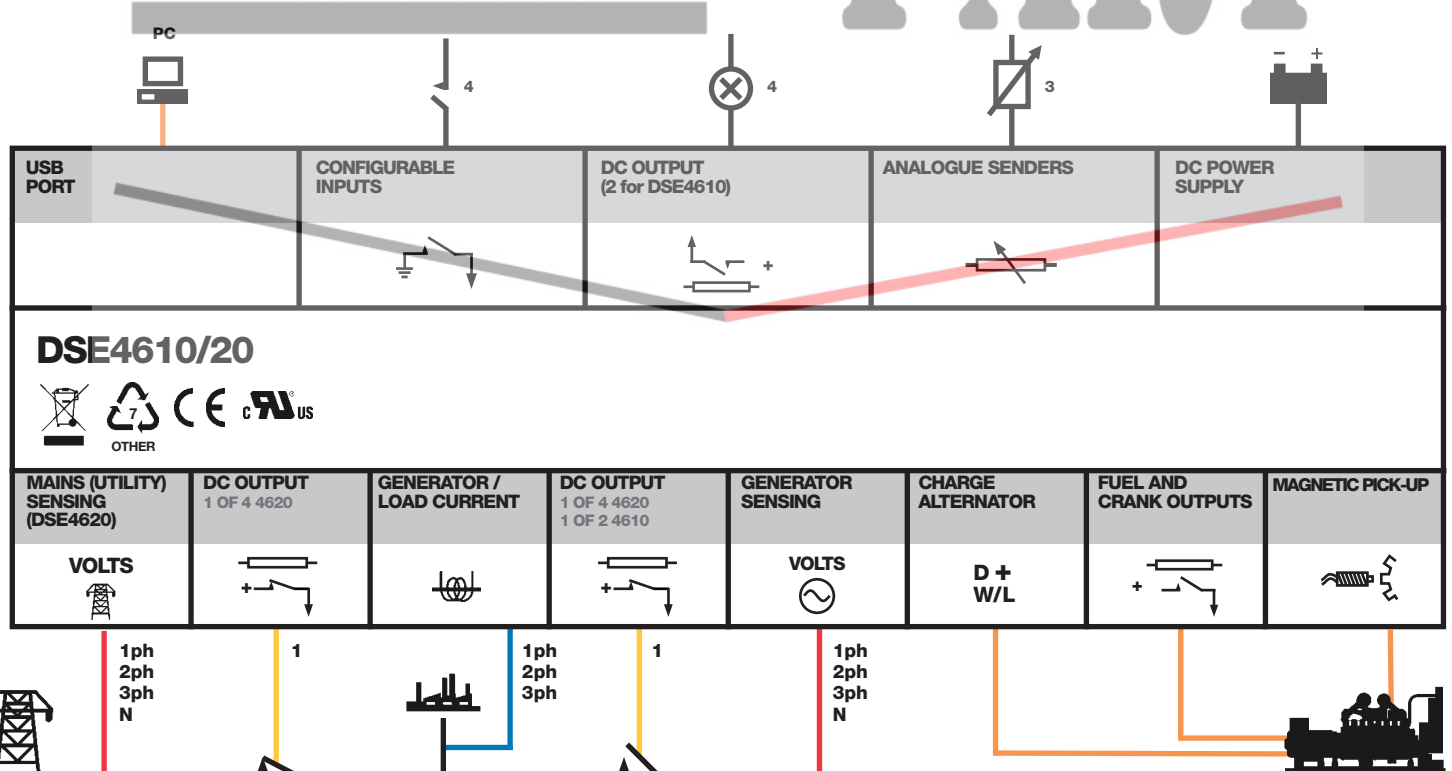



**GENSET  
PART**



# DSE4610/20

## AUTO START AND AUTO MAINS FAILURE CONTROL MODULES

(ALTERNATOR FREQUENCY & MAGNETIC PICK-UP SPEED  
SENSING)



FEATURES

DSE4610



### KEY BENEFITS

- Ultimate size to feature ratio
- Automatically transfers between mains (utility) and generator (DSE4620 only)
- Hours counter provides accurate information for monitoring and maintenance periods
- User-friendly set-up and button layout for ease of use
- Multiple parameters are monitored simultaneously which are clearly displayed on the largest back-lit icon display in its class
- The module can be configured to suit a wide range of applications
- Uses DSE Configuration Suite PC Software for simplified configuration
- Licence-free PC software
- IP65 rating (with optional gasket) offers increased resistance to water ingress

### KEY FEATURES

- Alternator frequency & MPU speed sensing in one variant
- Largest back-lit icon display in its class
- Real time clock provides accurate event logging
- Fully configurable via the fascia or PC using USB communication
- Extremely efficient power save mode
- 3 phase generator sensing
- 3 phase mains (utility) sensing (DSE4620 only)
- Generator/load power monitoring (kW, kV A, kV Ar, pf)
- Generator/load current monitoring and protection
- Fuel and crank outputs
- Compatible with 600 V ph to ph nominal systems
- 4 configurable DC outputs
- 3 configurable analogue/digital inputs

- 4 configurable digital inputs
- Configurable staged loading outputs
- 3 engine maintenance alarms
- Engine speed protection
- Engine hours counter
- Engine pre-heat
- Engine run-time scheduler
- Battery voltage monitoring
- Start on low battery voltage
- Configurable remote start input
- 1 alternative configuration
- Comprehensive warning, electrical trip or shutdown protection upon fault condition
- LCD alarm indication
- Event log (50)

### SPECIFICATION

**DC SUPPLY**  
**CONTINUOUS VOLTAGE RATING**  
8 V to 35 V Continuous

**CRANKING DROPOUTS**  
Able to survive 0 V for 50 mS, providing supply was at least 10 V before dropout and supply recovers to 5 V. This is achieved without the need for internal batteries. LEDs and backlight will not be maintained during cranking.

**MAXIMUM OPERATING CURRENT**  
85 mA at 12 V, 96 mA at 24 V

**MAXIMUM STANDBY CURRENT**  
51 mA at 12 V, 47 mA at 24 V

**MAXIMUM SLEEP CURRENT**  
35 mA at 12 V, 32 mA at 24 V

**MAXIMUM DEEP SLEEP CURRENT**  
<10 uA at 12 V, <10 uA at 24 V

**MAINS (UTILITY) DSE4620 ONLY**  
**VOLTAGE RANGE**  
15 V to 415 V AC (Ph to N)  
26 V to 719 V AC (Ph to Ph)

**FREQUENCY RANGE**  
3.5 Hz to 75 Hz

**OUTPUTS**  
**OUTPUT A (FUEL)**  
10 A short term, 5 A continuous, at supply voltage

**OUTPUT B (START)**  
10 A short term, 5 A continuous, at supply voltage

**AUXILIARY OUTPUTS C & D**  
2 A DC at supply voltage

**AUXILIARY OUTPUTS E & F DSE4620**  
2 A DC at supply voltage

**GENERATOR**  
**VOLTAGE RANGE**  
15 V to 415 V AC (Ph to N)  
26 V to 719 V AC (Ph to Ph)

**FREQUENCY RANGE**  
3.5 Hz to 75 Hz

**MAGNETIC PICK UP**  
**VOLTAGE RANGE**  
+/- 0.5 V to 70 V

**FREQUENCY RANGE**  
10,000 Hz (max)

**DIMENSIONS**  
**OVERALL**  
140 mm x 113 mm x 43 mm  
5.5" x 4.4" x 1.7"

**PANEL CUT-OUT**  
118 mm x 92 mm  
4.6" x 3.6"

**MAXIMUM PANEL THICKNESS**  
8 mm  
0.3"

**STORAGE TEMPERATURE RANGE**  
-40 °C to +85 °C  
-40 °F to +185 °F

**OPERATING TEMPERATURE RANGE**  
-30 °C to +70 °C  
-22 °F to +158 °F

### OPTIONAL PARTS

PART	PART NUMBER
IP65 Gasket	020-282

### RELATED MATERIALS

#### TITLE

DSE4610/20 Installation Instructions  
DSE4610/20 Operator Manual  
DSE4610/20 Configuration Suite PC Manual

#### PART NO'S

053-156  
057-200  
057-201

### DEEP SEA ELECTRONICS PLC UK

Highfield House, Hunmanby Industrial Estate, Hunmanby YO14 0PH  
**TELEPHONE** +44 (0) 1723 890099 **FACSIMILE** +44 (0) 1723 893303  
**EMAIL** sales@deepseapl.com **WEBSITE** www.deepseapl.com

### DEEP SEA ELECTRONICS INC USA

3230 Williams Avenue, Rockford, IL 61101-2668 USA  
**TELEPHONE** +1 (815) 316 8706 **FACSIMILE** +1 (815) 316 8708  
**EMAIL** sales@deepseausa.com **WEBSITE** www.deepseausa.com